

INSTRUCTION
- LED FLOOD LIGHT

- Read through this manual before installation.
- The lamp must be reliably grounded.
- this product must be installed and maintained by certified electrician.
- Consult with the manufacturer before maintenance.
- Turn OFF the power before installation and maintenance.
- Make sure the product is firmly installed.
- Do not touch the lamp body when the lamp is light on.
- If the temperature is too high, the output power will be reduce until the temperature to normal.
- Do not install the lamp in a confined space.
- The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
- For all of the above installation, it is recommended that all models with safety rope.


Before wiring the lamps, turn off the main power switch Connect the corresponding line to the mains as shown in the figure below。

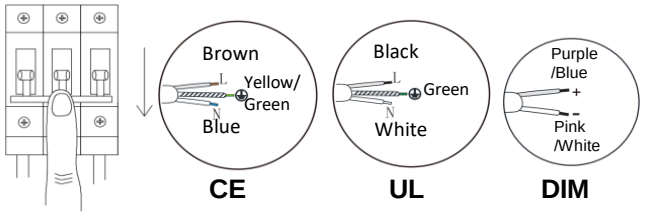


Turn off the Power switch

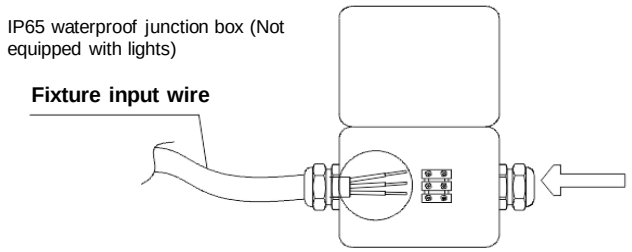


Product Specification:

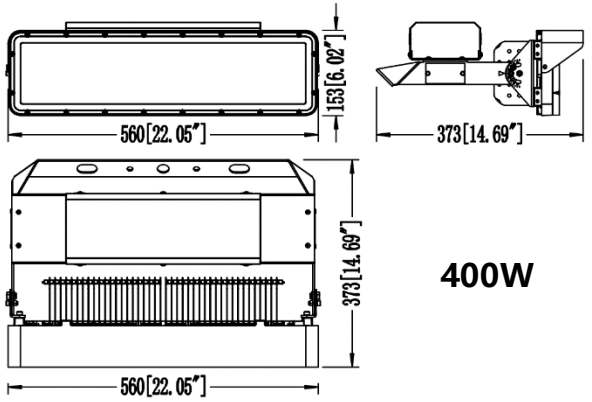



400W

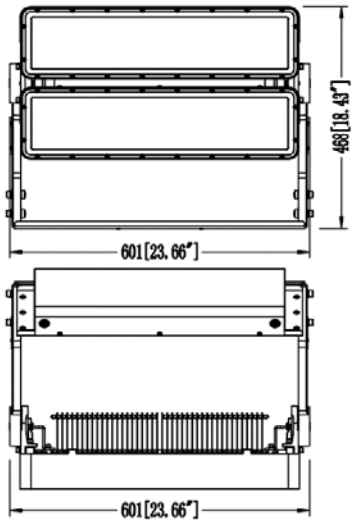

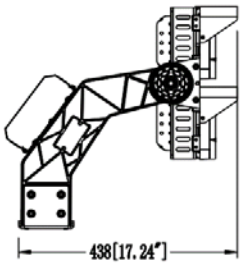


800W

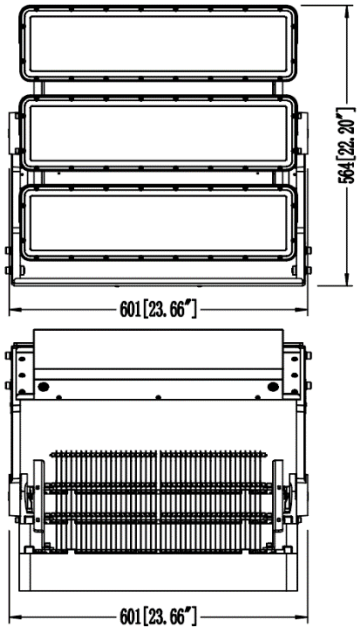

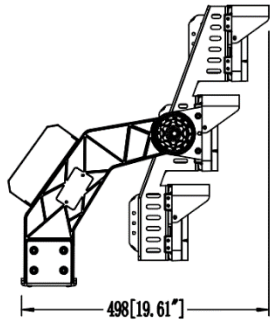

1200W


INSTRUCTION
- LED FLOOD LIGHT

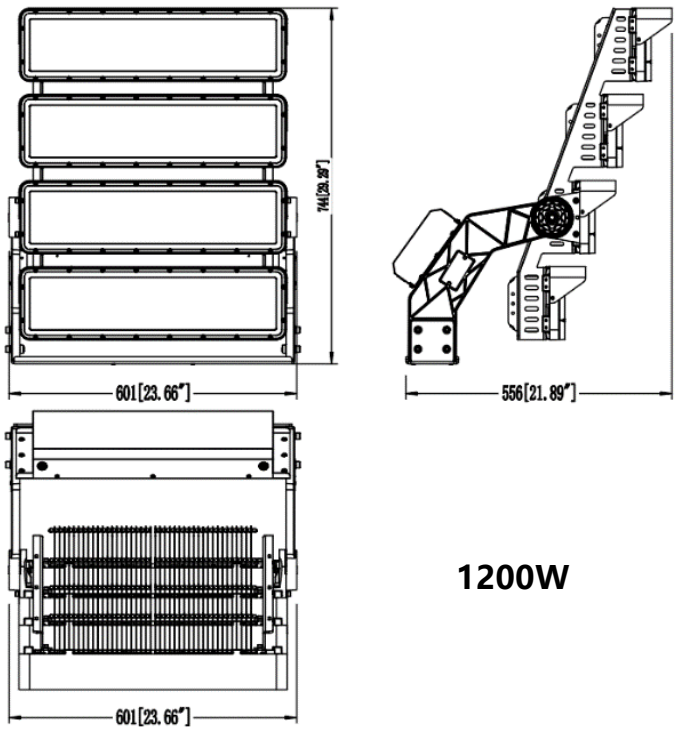


1200W

Installation Instructions:


1.

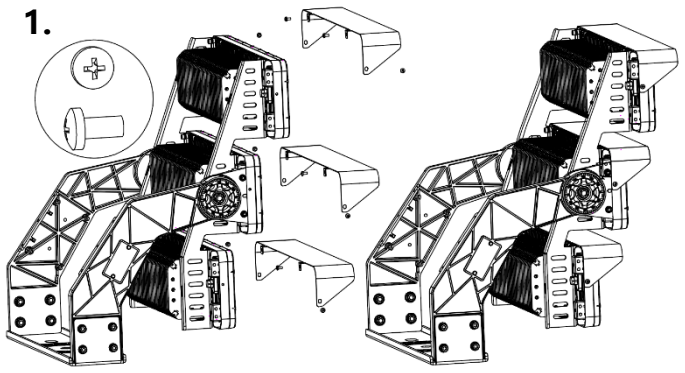

2.

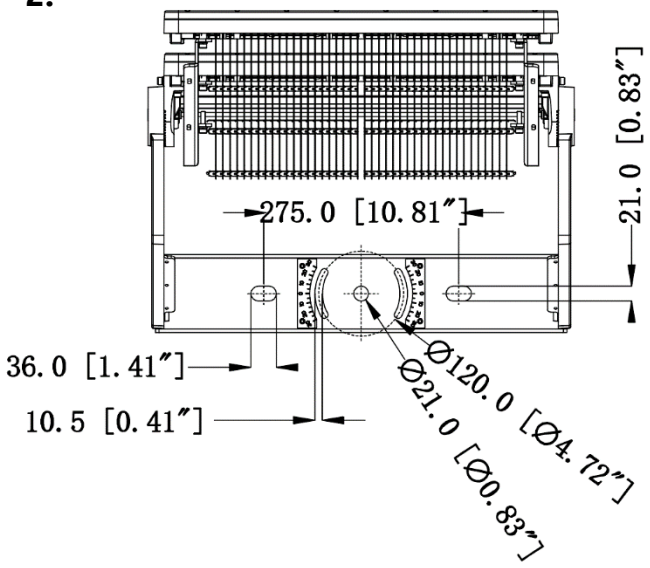


3.

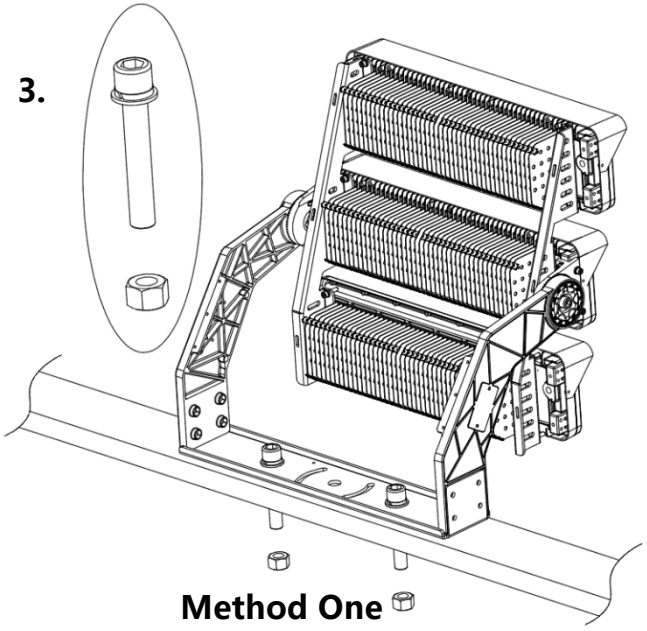


Method One

4.

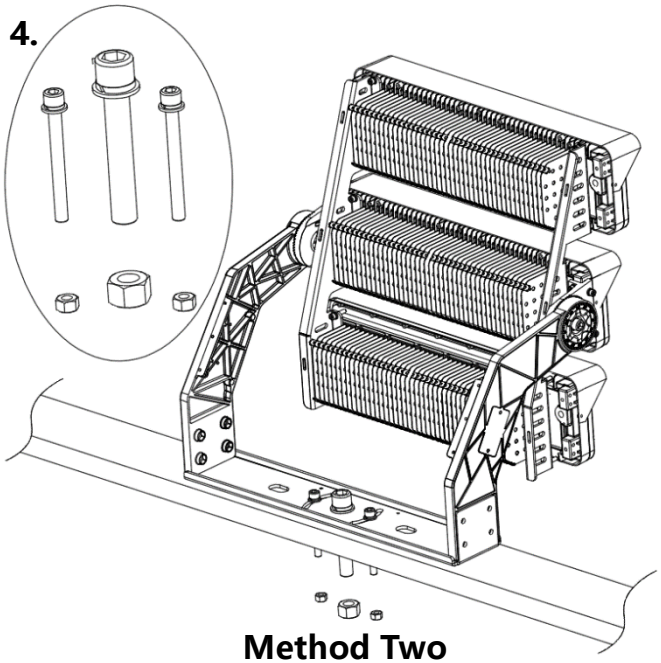


Method Two

5.

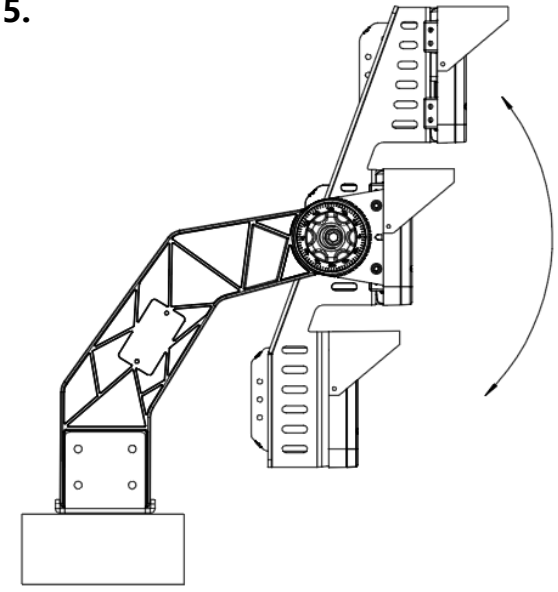


INSTRUCTION
- LED FLOOD LIGHT


6.

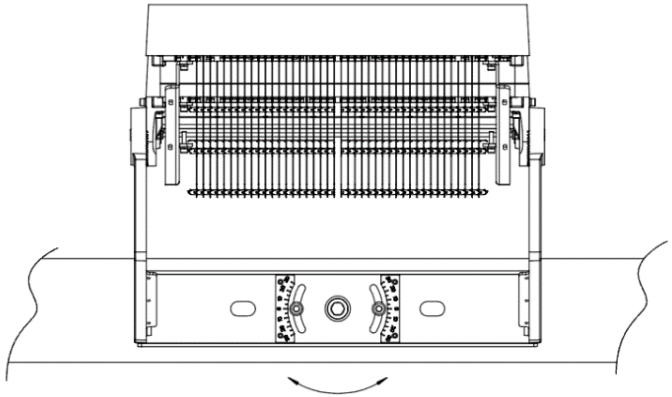


7.

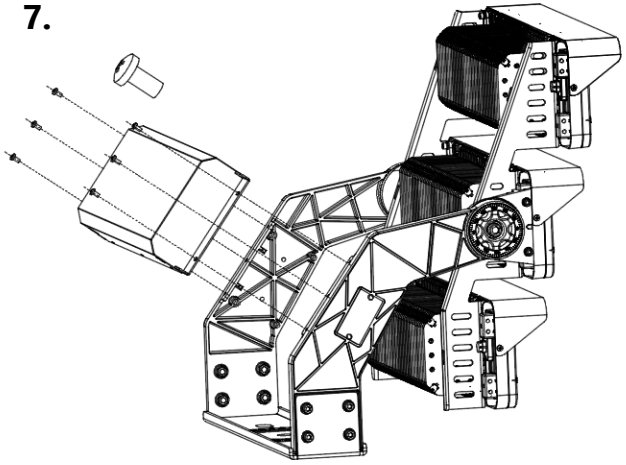


8.

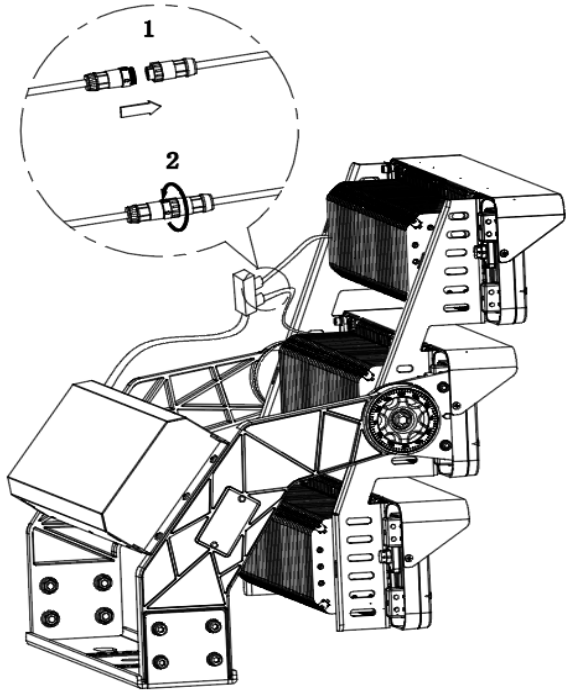

9.

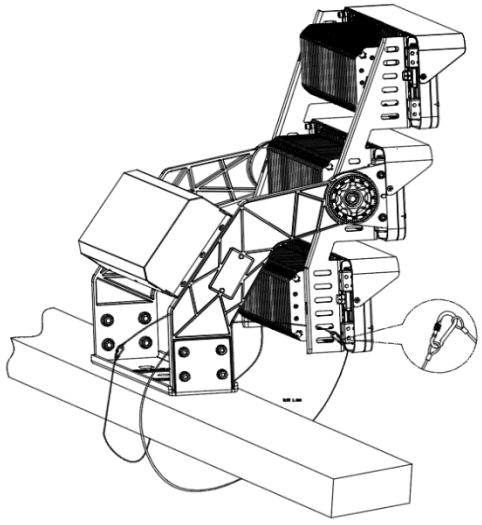

10.

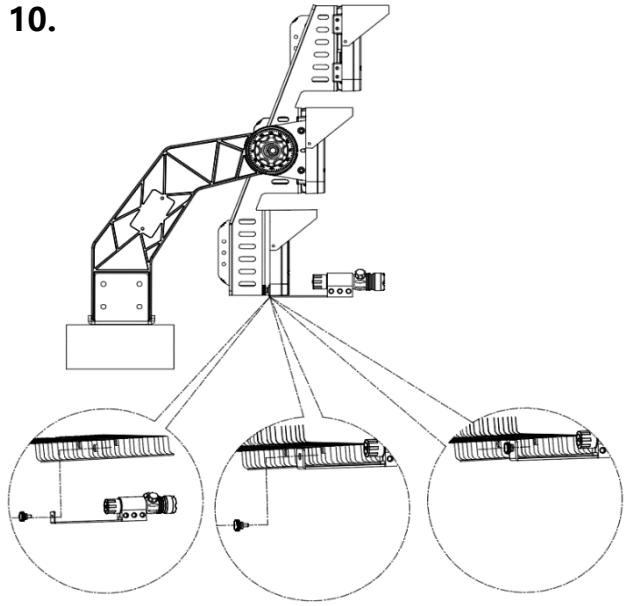

11.

